



**SEHA MÜHENDİSLİK MÜŞAVİRLİK
TİC. VE MAKİNA SAN. LTD. ŞTİ.**

Ayten Sok. No:27/2 Mebusevleri 06580 Ankara
Tel: (312) 215 75 00 (pbx) Fax: (312) 215 75 15
www.seha.com.tr • info@seha.com.tr

SEHA AIR®
aerotech®

SEHA MÜHENDİSLİK MÜŞAVİRLİK TİC. VE MAKİNA SAN.LTD. ŞTİ. / PRICE LIST

KOD	SEHAIR No	Description	Contitech Ref.
210001	6644	Rolling Lobe Air Spring	644 N
210021	6661	Rolling Lobe Air Spring	661 N
210041	6662	Rolling Lobe Air Spring	662 N
210061	6673	Rolling Lobe Air Spring	673 N
210081	7701	Rolling Lobe Air Spring	701 N
210101	7706	Rolling Lobe Air Spring	706 N
210121	7713	Rolling Lobe Air Spring	713 N
210141	715	Rolling Lobe Air Spring	715 N
210161	716	Rolling Lobe Air Spring	716 N
210181	7719	Rolling Lobe Air Spring	719 N
210201	7720	Rolling Lobe Air Spring	720 N
210221	7727	Rolling Lobe Air Spring	727 N
210241	7728	Rolling Lobe Air Spring	728 N
210261	7737	Rolling Lobe Air Spring	737 N
210301	7757	Rolling Lobe Air Spring	757 N
210411	7782	Rolling Lobe Air Spring	782 N
	7873	Rolling Lobe Air Spring	873 N
210561	8876	Rolling Lobe Air Spring	876 N
210601	8882	Rolling Lobe Air Spring	882 N1
210621	8883	Rolling Lobe Air Spring	883 N1
210641	8884	Rolling Lobe Air Spring	884 N
210681	8897	Rolling Lobe Air Spring	897 N
210701	9916	Rolling Lobe Air Spring	916 N1
210801	9943	Rolling Lobe Air Spring	943 N
210821	9944	Rolling Lobe Air Spring	944 N
211041	11885	Rolling Lobe Air Spring	1885 N1
211181	4415-28	Rolling Lobe Air Spring	RZ 415-28
220041	7725-1 S	Metal Lobe Air Spring / Without Piston	725 N P01
220221	8810 S	Metal Lobe Air Spring / Without Piston	810 MB
220301	8811-22 SB	Metal Lobe Air Spring / Without Piston	811 MB
220341	8811-1 S	Metal Lobe Air Spring / Without Piston	811 MB
220381	8811-2 S	Metal Lobe Air Spring / Without Piston	811 MB
220401	8811-4 S	Metal Lobe Air Spring / Without Piston	811 MB
220461	8813 S	Metal Lobe Air Spring / Without Piston	813 MB /O
220501	8836-2 S	Metal Lobe Air Spring / Without Piston	836 M2
220521	8836 S	Metal Lobe Air Spring / Without Piston	836 M
220561	8881 S	Metal Lobe Air Spring / Without Piston	881 MB
220621	9902 S	Metal Lobe Air Spring / Without Piston	902 MB
220681	9940 S	Metal Lobe Air Spring / Without Piston	940 MB
220701	9941 S	Metal Lobe Air Spring / Without Piston	941 MB
220721	9942 S	Metal Lobe Air Spring / Without Piston	942 MB
220781	44004-2 S	Metal Lobe Air Spring / Without Piston	4004 N P02
220801	44022 S	Metal Lobe Air Spring / Without Piston	4004
220821	44022-2 S	Metal Lobe Air Spring / Without Piston	4022 N P02
220841	44023-3 S	Metal Lobe Air Spring / Without Piston	4023 N P03
220861	44028-2 S	Metal Lobe Air Spring / Without Piston	4028 N P02
220901	44154 S	Metal Lobe Air Spring / Without Piston	
220921	44154-1 S	Metal Lobe Air Spring / Without Piston	4154 N P01
221041	44156-5 S	Metal Lobe Air Spring / Without Piston	4156 N P05
221061	44156-6 S	Metal Lobe Air Spring / Without Piston	4156 N P06
221101	44157-4 S	Metal Lobe Air Spring / Without Piston	4157 N P04

221121	44157-5 S	Metal Lobe Air Spring / Without Piston	W01 M58 7074 / 4157 N P05
221161	44158-2 S	Metal Lobe Air Spring / Without Piston	4158 N P02
221201	44159-5 S	Metal Lobe Air Spring / Without Piston	4159 N P05
221221	44159-3 S	Metal Lobe Air Spring / Without Piston	
221241	44159-4 S	Metal Lobe Air Spring / Without Piston	
221281	44183-23 S	Metal Lobe Air Spring / Without Piston	4183 N P23
221321	44390-1 S	Metal Lobe Air Spring / Without Piston	4390 N1
221341	44390-2 S	Metal Lobe Air Spring / Without Piston	4390 N2
221521	44713-2 S	Metal Lobe Air Spring / Without Piston	4713 N P02
221541	44718-1 S	Metal Lobe Air Spring / Without Piston	4718 N P01
221641	44757-1 S	Metal Lobe Air Spring / Without Piston	4757 N1
221721	44813-7 S	Metal Lobe Air Spring / Without Piston	4813 N P07
221781	44838-3 S	Metal Lobe Air Spring / Without Piston	4838 N P03
221821	44881-2 S	Metal Lobe Air Spring / Without Piston	4881 N P02
221841	44882-1 S	Metal Lobe Air Spring / Without Piston	4882 NP01
221861	44883-1 S	Metal Lobe Air Spring / Without Piston	4883 NP01
221881	44884-1 S	Metal Lobe Air Spring / Without Piston	4884 NP01
221901	44911-3 S	Metal Lobe Air Spring / Without Piston	4911 N P03
221921	44912-8 S	Metal Lobe Air Spring / Without Piston	4912 N P08
221941	44913-4 S	Metal Lobe Air Spring / Without Piston	4913 N P04
222161	11310 S	Metal Lobe Air Spring / Without Piston	
222221	22619 S	Metal Lobe Air Spring / Without Piston	SAF 2619
222321	66416 S	Metal Lobe Air Spring / Without Piston	1076416 VOLVO
222341	66418 S	Metal Lobe Air Spring / Without Piston	1076418 VOLVO
222381	77803 S	Metal Lobe Air Spring / Without Piston	6605 N P01 / 20427803 volvo
222401	77804 S	Metal Lobe Air Spring / Without Piston	6606 N P01 / volvo 20427804
222441	88185-22 S	Metal Lobe Air Spring / Without Piston	W01 M58 8185
222781	1131-18 S	Metal Lobe Air Spring / Without Piston	
222801	1131-50 S	Metal Lobe Air Spring / Without Piston	
222901	90301 S	Metal Lobe Air Spring / Without Piston	1440301
222961	90304 S	Metal Lobe Air Spring / Without Piston	1440304
223081	22918 S	Metal Lobe Air Spring / Without Piston	4810 N P05 / SAF 2918 V
230161	7725-2 C	Metal Lobe Air Spring / With Piston	725 N P02
230361	8810 C	Metal Lobe Air Spring / With Piston	810 MB
230421	8811 C	Metal Lobe Air Spring / With Piston	811 MB
230441	8811-1 C	Metal Lobe Air Spring / With Piston	
230461	8811-2 C	Metal Lobe Air Spring / With Piston	
230541	8813 C	Metal Lobe Air Spring / With Piston	813 MB
230761	8836-1 C	Metal Lobe Air Spring / With Piston	836 M K1
230781	8836-2 C	Metal Lobe Air Spring / With Piston	836 M2 K1
230941	8881-1 C	Metal Lobe Air Spring / With Piston	881 MB
230961	8881-1 CP	Metal Lobe Air Spring / With Piston	
231141	9902 C	Metal Lobe Air Spring / With Piston	902 MB
231161	9912 C	Metal Lobe Air Spring / With Piston	912 MB
231261	9940 C	Metal Lobe Air Spring / With Piston	940 MB
231281	9940 CP	Metal Lobe Air Spring / With Piston	
231321	9941 C	Metal Lobe Air Spring / With Piston	941 MB
231341	9941-1 CP	Metal Lobe Air Spring / With Piston	
231361	9942 C	Metal Lobe Air Spring / With Piston	942 MB
231561	22619 CP	Metal Lobe Air Spring / With Piston	4022 N P05 /SAF 2619 V
231701	44004-3 CP	Metal Lobe Air Spring / With Piston	4004 N P03
231741	44022-3 C	Metal Lobe Air Spring / With Piston	4022 N P03
231761	44022-3 CP	Metal Lobe Air Spring / With Piston	4022 N P03
231781	44023-3 C	Metal Lobe Air Spring / With Piston	4023 N P03
231801	44028-2 C	Metal Lobe Air Spring / With Piston	4028 N P02
231961	44154-5 CP	Metal Lobe Air Spring / With Piston	4154 N P05
231981	44154-5 C	Metal Lobe Air Spring / With Piston	4154 N P05
232021	44156-6 C	Metal Lobe Air Spring / With Piston	4156 N P06
232041	44156-7 C	Metal Lobe Air Spring / With Piston	4156 N P07
	44156-15 CP	Metal Lobe Air Spring / With Piston	4156 N P15
232321	44157 CP	Metal Lobe Air Spring / With Piston	4157
232341	44157-4 CP	Metal Lobe Air Spring / With Piston	4157 N P04
232361	44157-5 CP	Metal Lobe Air Spring / With Piston	4157 N P05

232441	44157-10 CP	Metal Lobe Air Spring / With Piston	4157 N P10
232481	44158-3 CP	Metal Lobe Air Spring / With Piston	4158 N P03
232501	44159-3 C	Metal Lobe Air Spring / With Piston	
232561	44159-12 CP	Metal Lobe Air Spring / With Piston	4159 N P12 / 4159 N P04
232581	44159-7 C	Metal Lobe Air Spring / With Piston	4159 N P07
232601	44159-9 CP	Metal Lobe Air Spring / With Piston	4159 N P09
232661	44159-14 CP	Metal Lobe Air Spring / With Piston	4159 N P14
232821	44159 C	Metal Lobe Air Spring / With Piston	
232901	44183-23 C	Metal Lobe Air Spring / With Piston	4183 N P23
233021	44390-1 C	Metal Lobe Air Spring / With Piston	4390 N P01
233041	44390-2 C	Metal Lobe Air Spring / With Piston	4390 N P02
233341	44713-2 C	Metal Lobe Air Spring / With Piston	4713 N P02
233361	44718-1 C	Metal Lobe Air Spring / With Piston	4718 N P01
233501	44757-1 C	Metal Lobe Air Spring / With Piston	4757 N P01
233741	44813-7 C	Metal Lobe Air Spring / With Piston	4813 N P07
233761	44838-1 C	Metal Lobe Air Spring / With Piston	4838 N P01
233921	44881 C	Metal Lobe Air Spring / With Piston	4881
233941	44881 CP	Metal Lobe Air Spring / With Piston	4881
233961	44882-5 C	Metal Lobe Air Spring / With Piston	4882 N1 P05
233981	44883-7 C	Metal Lobe Air Spring / With Piston	4883 N1 P06
234001	44884-6 C	Metal Lobe Air Spring / With Piston	4884 N1 P06
234021	44911-3 C	Metal Lobe Air Spring / With Piston	4911 N P03
234081	44912-7 C	Metal Lobe Air Spring / With Piston	4912 N P07
234121	44913-2 C	Metal Lobe Air Spring / With Piston	4913 N P02
234601	1131-18 C	Metal Lobe Air Spring / With Piston	
234621	1131-50 C	Metal Lobe Air Spring / With Piston	
235181	88185-12 CP	Metal Lobe Air Spring / With Piston	
235201	88185-22 CP	Metal Lobe Air Spring / With Piston	
235221	88186 CP	Metal Lobe Air Spring / With Piston	1T 15MPW 7 / W01 M58 8186
235601	66416 C	Metal Lobe Air Spring / With Piston	1076416 volvo 20 582 215
235621	66418 C	Metal Lobe Air Spring / With Piston	1076418 volvo 20 582 214
235681	77803 C	Metal Lobe Air Spring / With Piston	6605 N P01 / 20427803 volvo
235701	77804 C	Metal Lobe Air Spring / With Piston	6606 N P01 / volvo 20427804
235801	90301 C	Metal Lobe Air Spring / With Piston	1440301
235861	90304 C	Metal Lobe Air Spring / With Piston	1440304